

©2016 POM GEAR Inc. All rights reserved. All other trademarks and trade names are those of their respective owners. The illustrated product and specifications may differ slightly from that supplied. Designed by POM Gear USA. Manufactured in China.
Send email to warranty@pomgear.com
Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you purchased it from. You can contact a POM Gear representative and they will assist you with any questions you might have.

Technical support:
Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you purchased it from. You can contact a POM Gear representative and they will assist you with any questions you might have.

Warranty & Limitations

- To activate your product warranty go to our website <http://www.pomgear.com/warranty/> & register this product
- Warranty limited to three years from the date of purchase.
- Guarantee will not be applied to the damages caused by faulty usages.

Products that have been subjected to abuse, misuse, accident, alteration, modification, tampering, negligence, faulty connection, attachment to any unauthorized accessories, lack of responsible care, repair or service in any way that is not mentioned in the manual for the product.

The damage caused by dust, wetness, coldness, overheating, placement near hot objects, near fire storage or use of corrosive elements.

No warranty in damage caused by acts of god or natural disasters such as floods, fires, typhoons, earthquakes and related matters.

To the extent permitted by law, POM GEAR shall not be liable for damages beyond replacing the defective product.

Warnings & Notes

- DO NOT OVERCHARGE. Unplug after 4 hours charging time.
- Do not store unit in high temperature environment, including intense sunlight heat. Do not place unit near fire or other excessively hot environments.
- Be cautious of excessive drops, bumps, abrasions or other impurities. If there is any damage to the battery such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and contact manufacturer or dispose of in an appropriate manner.
- Do not disassemble or attempt to modify it or replace any part of this unit. Do not attempt to charge unit using any other method, or connection other than the supplied accessories.



Compatibility:
In-ear Bluetooth ear-buds designed and intended to be used for all mobile devices that support Bluetooth.

Accessories:
Charging cable : 30CM+USBAM+Micro USB 5 PIN black PVC
Large and small size of earpieces
Shirt clip

LED indication
Low voltage alarm : red LED flashing
Charging : red LED on when charging and blue LED on when fully charged;
Bluetooth unconnected : blue LED flashing slowly
Bluetooth pairing : blue and red LED flashing rapidly together


User instructions
Power on : Press & hold the multi-functional button until blue LED goes on.
Power off : Press & hold the multi-functional button until red LED goes on.
Pairing : When unit is powered off, press & hold the multi-functional button for about 8-10s until rapid blinking blue & red LED lights appear. Unit is now in pairing mode.
Flex* to appear and select to pair.
make sure you Bluetooth enable device is on and search for "pom sound".
Volume control : while listening, press the V+ button to increase volume, or the V- button to decrease volume.
Music track : while listening, press & hold the V+ button for the next song, press & hold the V- button for the previous song.
Pause/play : While listening, press the multi-functional button to pause music; Press the button again to play music.
Answer/End call : Tap the multi-functional button.
Reject call : Press the multi-functional button for 1-2s.
Redial last number : Double click the multi-functional button to call the last and your cellular phone. Having both too close together may cause a signal interference that may cause your ear buds buttons to not work.
If the ear buds buttons don't respond after a call, press and hold the power button for 8-10 seconds to reset the functions.



SOUND • FLEX

In-ear Bluetooth ear-buds


User Manual

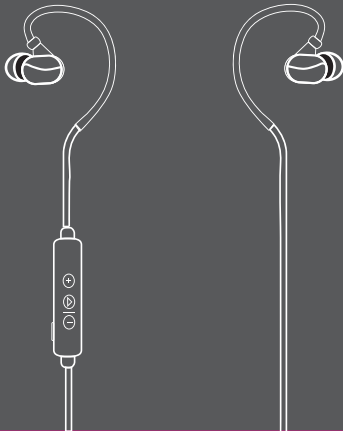

www.pomgear.com



Components
Battery lifetime : 300 times
system battery indicator
Automatically turns off after 5 min. of no use.
Battery indicator : supports IOS
Charging current : 150mA
Charging time : about 30 minutes
Charging interface : MICRO USB
Charging voltage : DC 5V
Play time : about 2-3 hours
Low-voltage implication : 3.2V
Working voltage : 3.7V
Product weight : about 13g (bare units)
Product size : 630*21*23mm

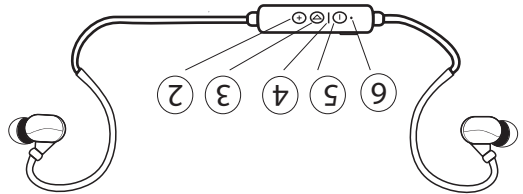

- ① USB Charging port
- ② V+
- ③ Multi-functional button
- ④ MIC
- ⑤ V-
- ⑥ LED